STOP VALVE FOR PRESSURE GAUGE (PG) (Type S and SA))



The stop valve allows through or shuts off the hydraulic fluid flow to the pressure gauge.

| Nominal size | 02 | |
|-------------------------------|---------------|--------------|
| Туре | For Rc thread | For G thread |
| Model | PG-SA-02 | PG-S-02A |
| Connecting pipe diameter (PG) | Rc1/4 | G1/4 |
| Connecting pipe diameter (P) | Rc1/4 | |
| Max. Operating pressure (Mpa) | 21 | |

Outside dimensions



STOP VALVE FOR PRESSURE GAUGE (PG)(Type SB)



The SB type stop valve for the pressure gauge has a joint so that the gauge indicator face can be set in the desired direction.

| Nominal size | 02 | |
|-------------------------------|--------------|--|
| Туре | For G thread | |
| Model | PG-SB-02 | |
| Connecting pipe diameter (PG) | G1/4 | |
| Connecting pipe diameter (P) | Rc1/4 | |
| Max. Operating pressure (Mpa) | 21 | |

Outside dimensions



STOP VALVE FOR PRESSURE GAUGE (PG)(Type SC)



Specifications

| Nominal size | 02 |
|-------------------------------|--------------|
| Туре | For G thread |
| Model | PG-SC-02 |
| Connecting pipe diameter (PG) | G1/4 |
| Connecting pipe diameter (P) | Rc1/4 |
| Max. Operating pressure (Mpa) | 21 |

Outside dimensions

